

## U92X serial product working in the Windows 98se

We need to prepare some files in Win2000 and Win98se CD.

- Windows 2000 Professional ( Use Microsoft MSDN Disc 0013.1 / April 2002 ):
  1. USBSTOR.sys  
C:\WINNT\system32\driver\
  2. USBSTOR.inf & USBSTOR.PNF  
C:\WINNT\inf\
- Windows 98 Second Edition install CD ( Use Microsoft MSDN Disc 2397 / October 2003 ):
  1. NTMAP.sys  
D:\ENGLISH\WIN98SE\BASE5.CAB
  2. NTMAP.inf  
D:\ENGLISH\WIN98SE\PRECOPY2.CAB
  3. NTMAP.cat  
D:\ENGLISH\WIN98SE\CATALOG3.CAB
  4. NTMAPHLP.PDR  
D:\ENGLISH\WIN98SE\BASE5.CAB

**Then, copy these files to the new folder under OS Win98se (e.g. C:\Win98se\_USB\_driver).**

1. When the USB cable is plugged in the PC, the system will show a message that the system finds the USB Mass Storage Device.



Select the recommended mode.




Select the “Specify a location :” and key-in the location (e.g. C:\Win98se\_USB\_driver).



Install success from the new driver to the system.



Then, the system will detect the new hard disk through U92X serial product board.

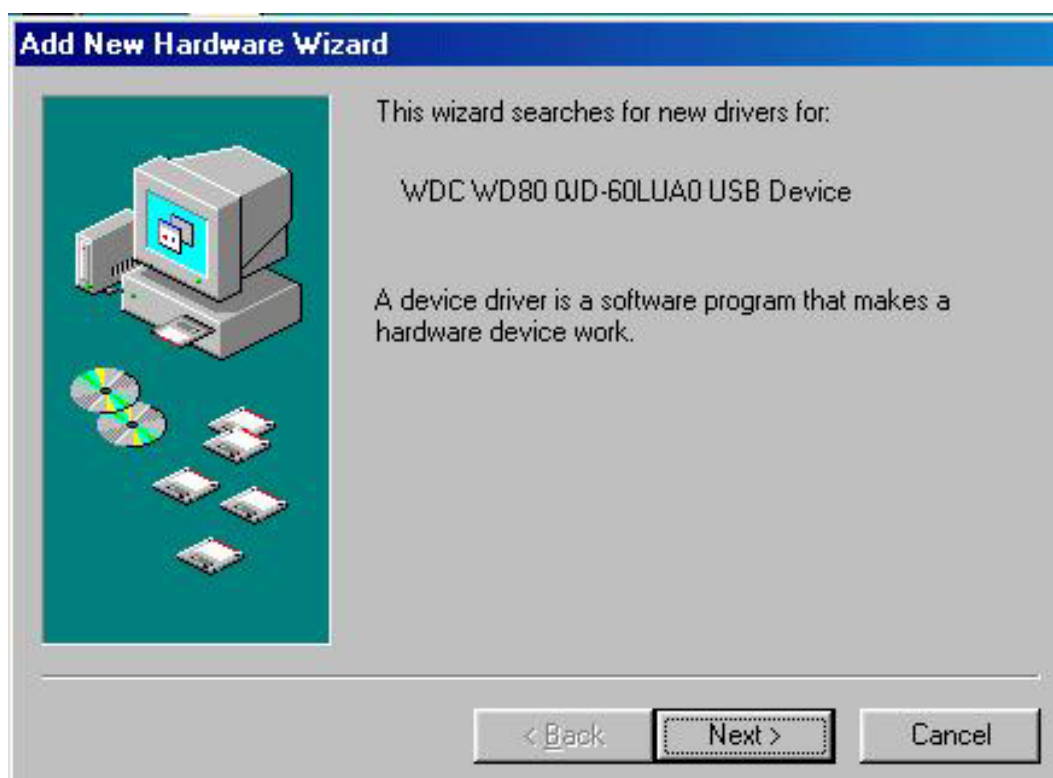


The system will detect the USB device is 1394/USB Disk in the Device Manager, and will show that it needs the NTMAP.INF to install the driver in the system.




Install success from the new driver to system.



In the Device Manager, we can find the new hard disk in the Disk drives

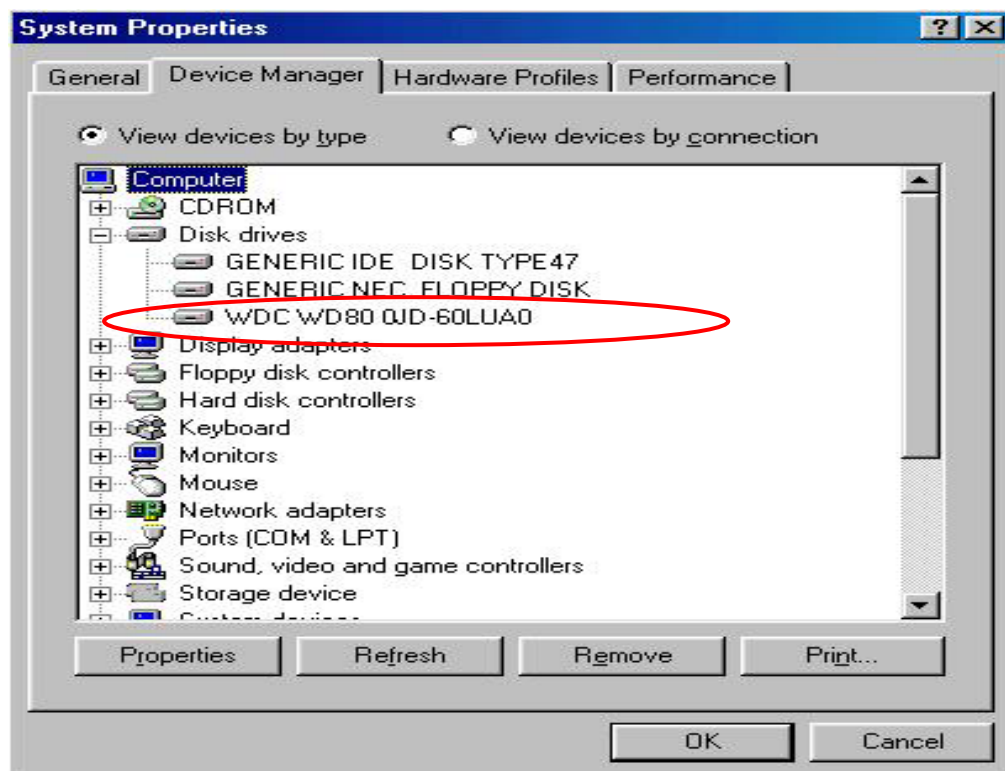

And also can find 1394/USB Disk in the Storage device, USB Mass Storage Device in the Universal Serial Bus controllers

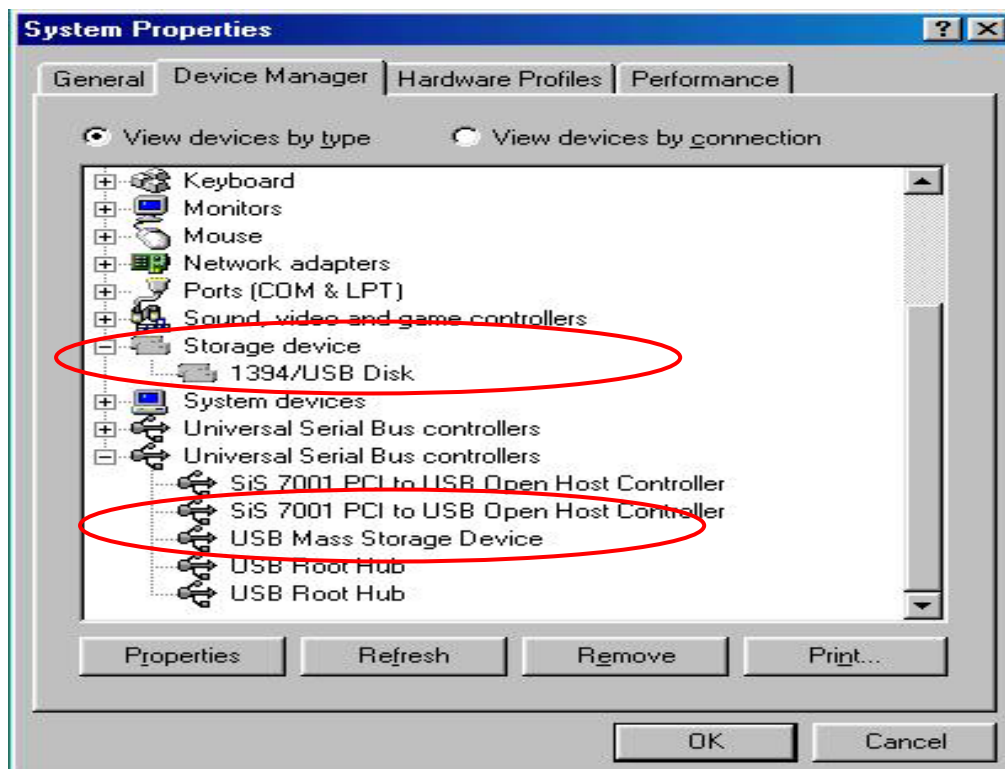

In the Registry Editor. We can find the new storage information in the location as below:

My Computer\HKEY\_LOCAL\_MACHINE\Enum\USBSTOR\  
e.g. Hard disk model name is WD800JD-60LUA0 ( SATA II 80G )

